


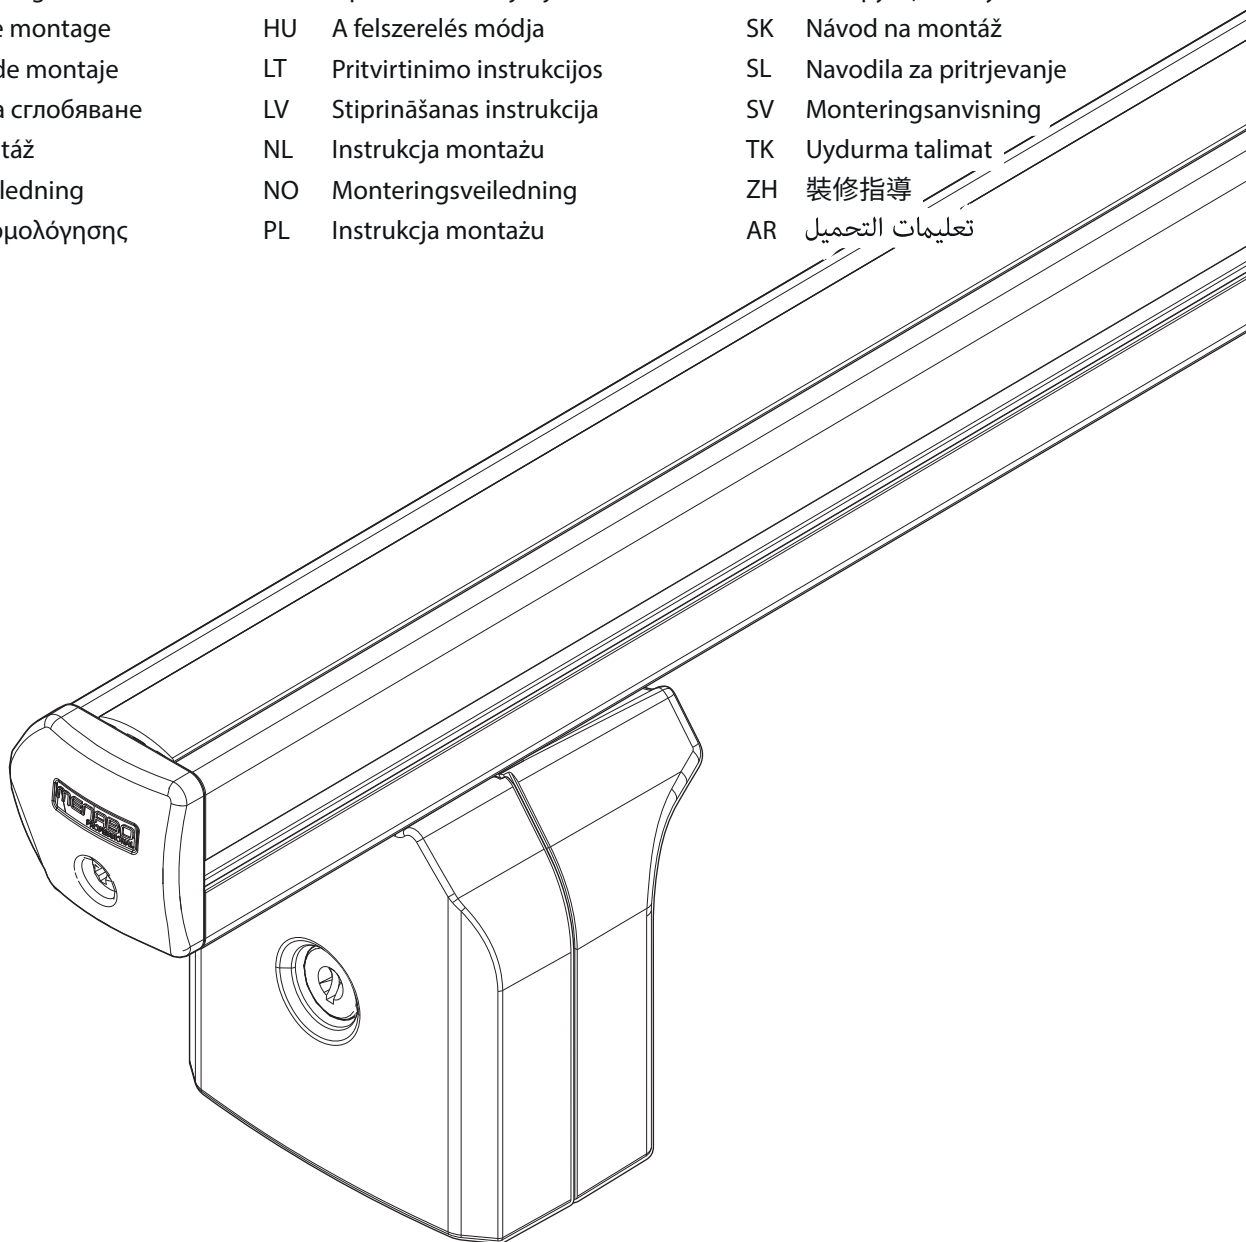



















MENABO




















free time on the move

PROFESSIONAL AIRDYN L



IT Istruzioni di montaggio	ET Paigaldusjuhend	PT Instruções de Montagem
EN Fitting instructions	FI Asennusohje	RO Instrucțiuni de montare
DE Montageanleitung	HR Uputa za sastavljanje	RU Инструкции по установке
FR Instructions de montage	HU A felszerelés módja	SK Návod na montáž
ES Instrucciones de montaje	LT Pritvirtinimo instrukcijos	SL Navodila za pritrjevanje
BG инструкции за сглобяване	LV Stiprināšanas instrukcija	SV Monteringsanvisning
CS Návod na montáž	NL Instrukcja montażu	TK Uydurma talimat
DA Monteringsvejledning	NO Monteringsveiledning	ZH 裝修指導
EL Οδηγίες συναρμολόγησης	PL Instrukcja montażu	AR تعليمات التجميع





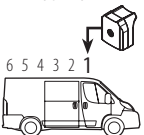
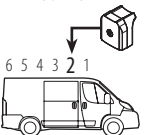
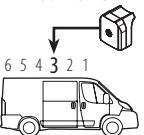
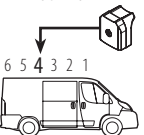
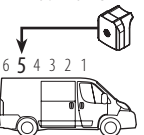
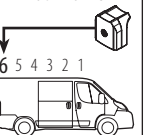
N.	[IT]Componenti (Inclusi) [EN]Components (Included) [FR]Composants (Comprises) [DE]Die Komponenten (im Lieferumfang enthalten) [ES]Componentes (Incluido)	Q.
1		2
2		2
3		2
4a	 SX	2
4b	 DX	2
5		4
6		4
7		4
8		4
9		4
10	 A2	2
11	 A3 DX	2
12	 A3 SX	2
13	 Ø8X17	4
14	 Ø6X18	8
15	 M8X30	4
16	 M6X16	8
17	 M6	8
18	 5mm - 0.2"	1
19		4


N.	[IT]Ricambi (A Richiesta) [EN]Spare Parts (Made to order) [FR]Pièces de rechange (Sur commande) [DE]E Teile (auf Anfrage) [ES]Piezas de recambio (Previa solicitud)	Q.	Codice-Code-Código
2		2	700007900000
3		2	700037200000
4a	 SX	1	700047300000
4b	 DX	1	
5		2	
7		1	700035600000
9		1	700034600000
5		2	700047500000
14	 Ø6X18	4	
16	 M6X16	4	
17	 M6	4	
19		2	
10	 A2	2	700048400000
11	 A3 DX	2	700049000000
12	 A3 SX	2	
13	 Ø8X17	4	700047900000
15	 M8X30	4	700049100000
18	 5mm - 0.2"	1	700025000000
19		4	700025300000

OPTIONAL KIT 000084800000



N.		Q.
20		4
21	 XXXX	2


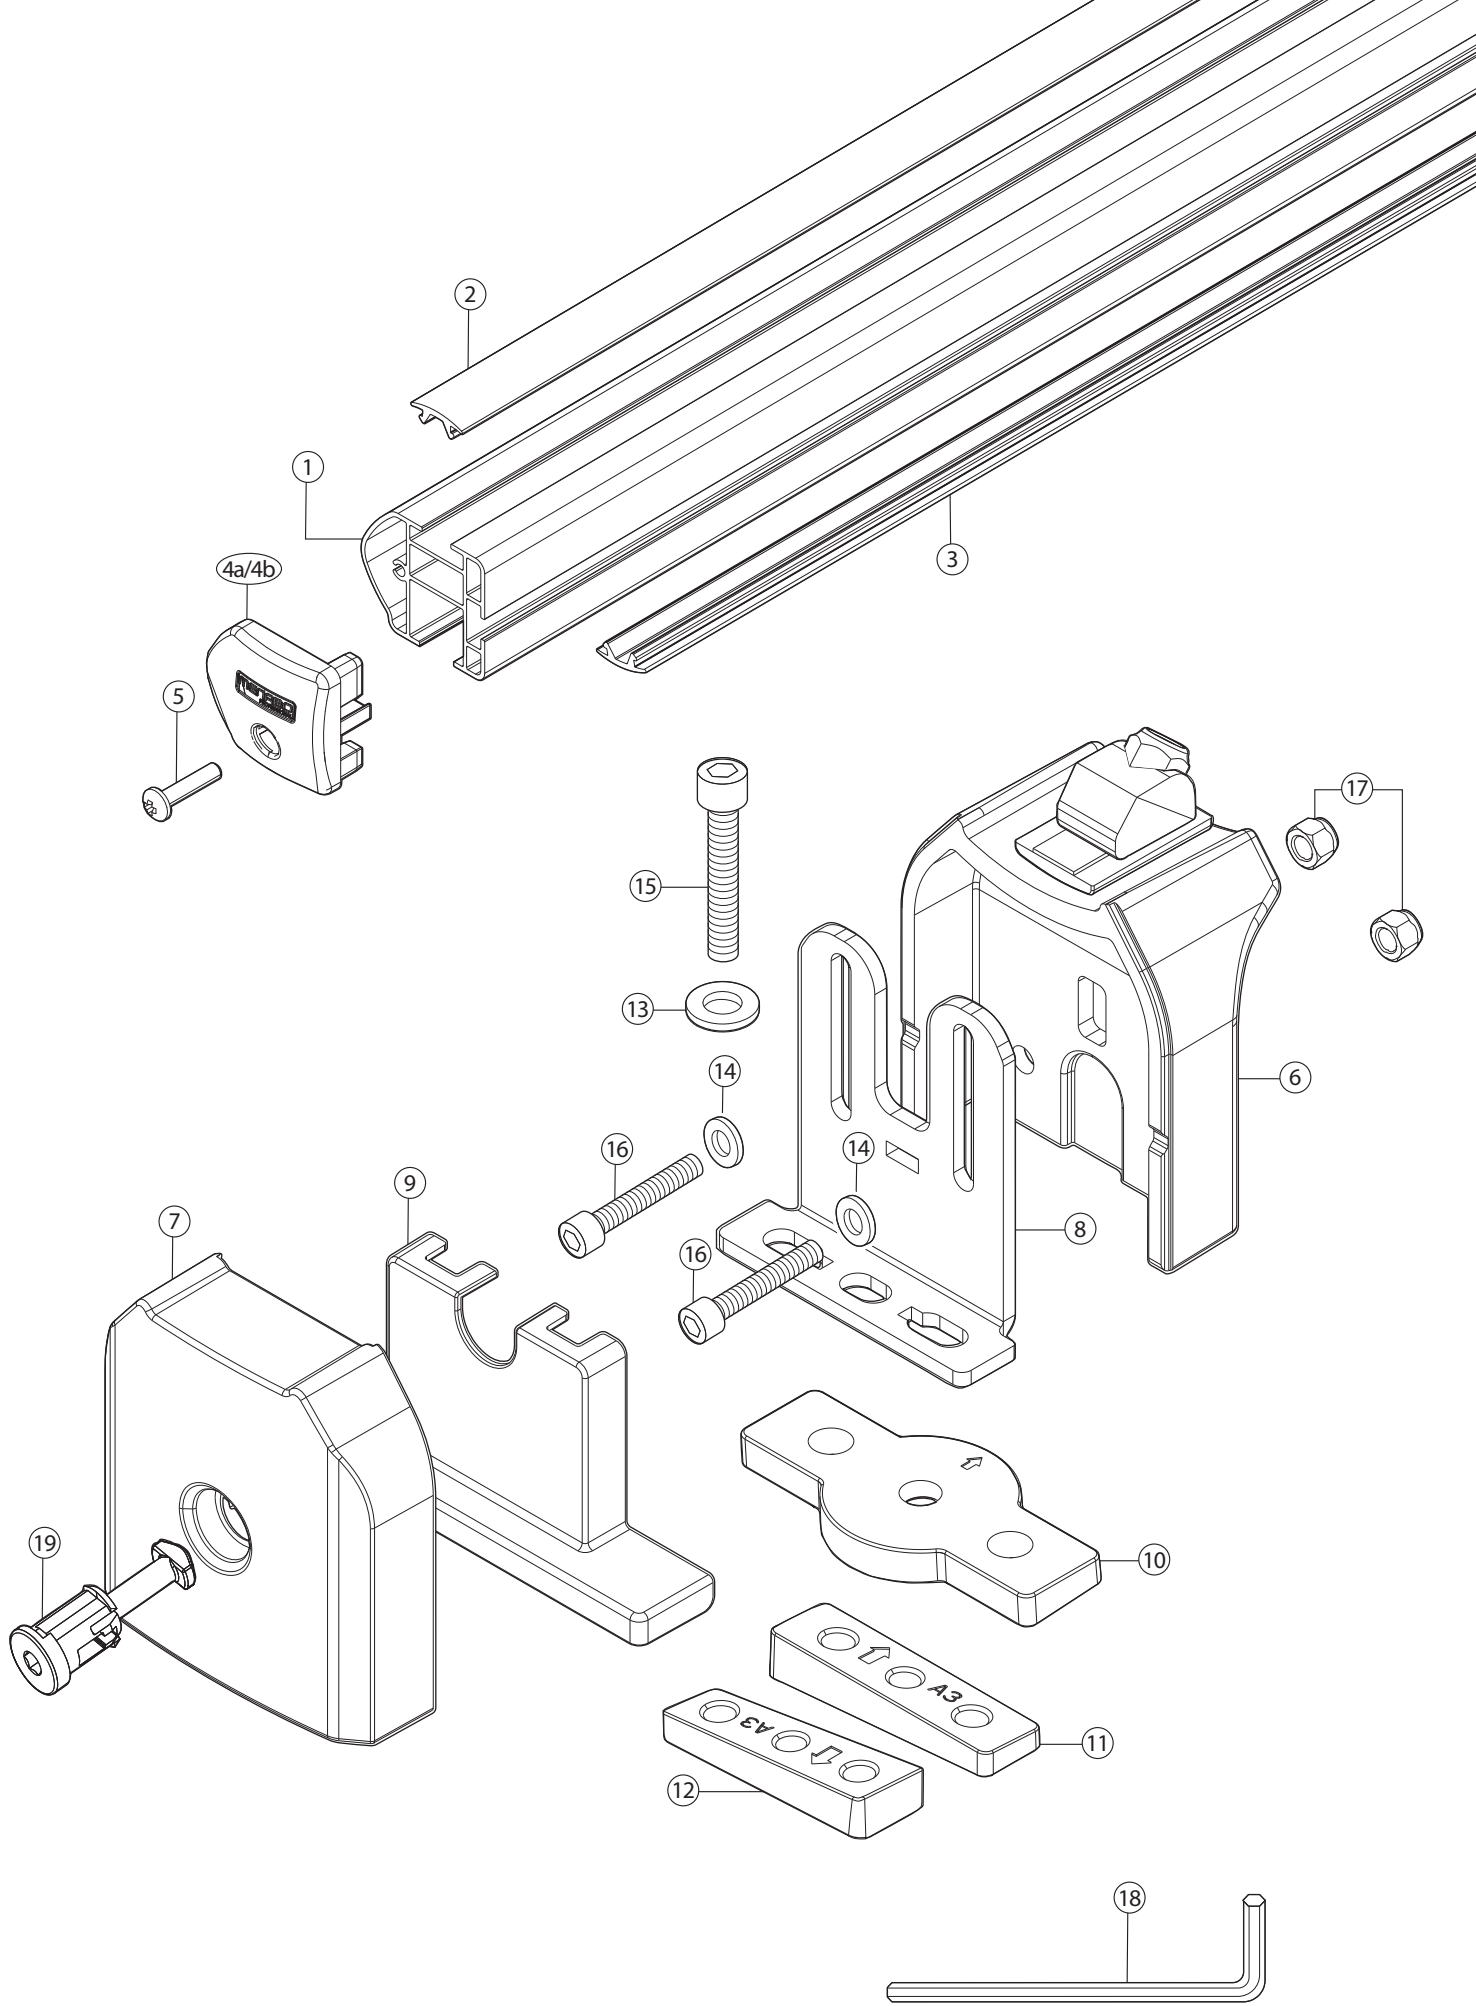


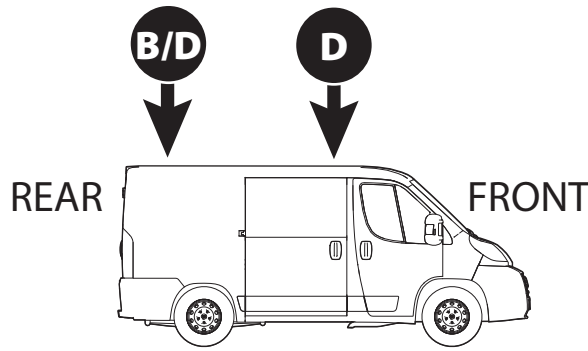


			YEAR	POSITION 1 	POSITION 2 	POSITION 3 	POSITION 4 	POSITION 5 	POSITION 6 
DACIA	Dokker Van	2	13>21	D					D
MERCEDES	Citan (W415) - L1,L2 - H1,H2	2	12>21	D					D
MERCEDES	Citan (W415) - L3	2	12>21	D					D
MERCEDES	Citan II	2	21>	D		B			
NISSAN	Nv250 - L1,L2 - H1,H2	2	19>21	D					D
NISSAN	Nv250 - L3	2	19>21	D					D
NISSAN	Townstar	2	21>	D		B			
RENAULT	Express II - L1,L2	2	20>	D		B			
RENAULT	Kangoo III (MK3) - L1,L2	2	21>	D		B			




1 **D FRONT**

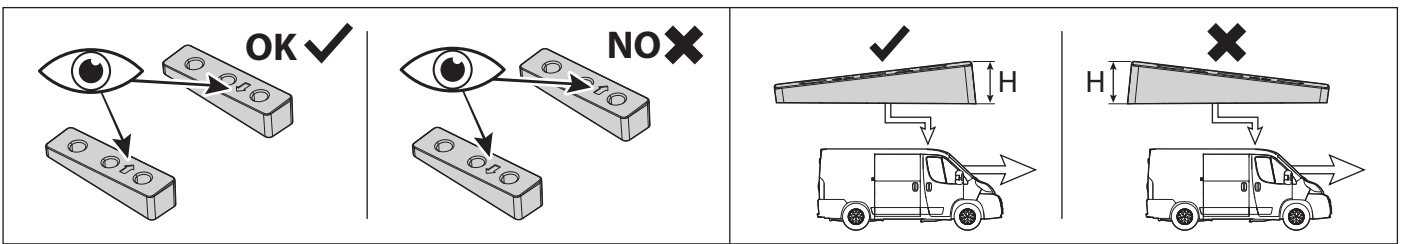
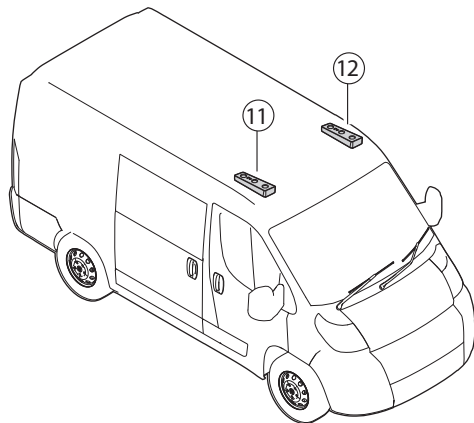
N.		Q.
11	 A3 DX	1
12	 A3 SX	1





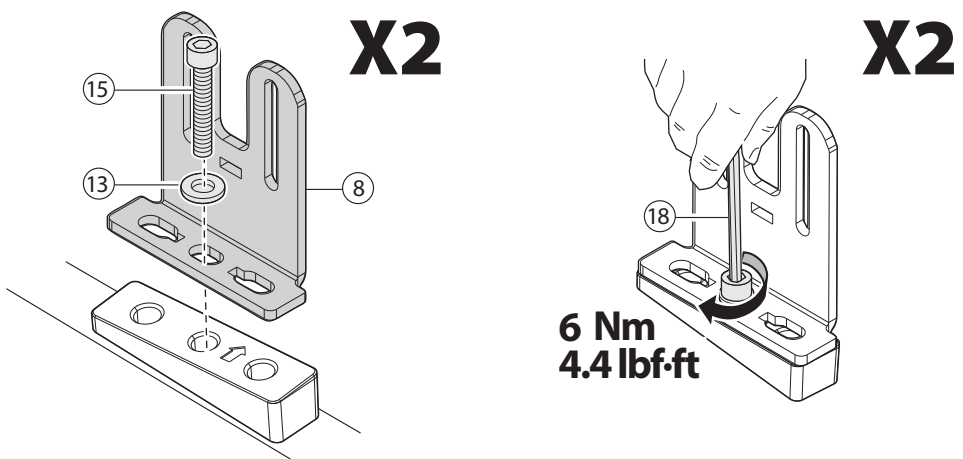


N.		Q.
8		1
13	 Ø8X17	1
15	 M8X30	1





2 **D** REAR

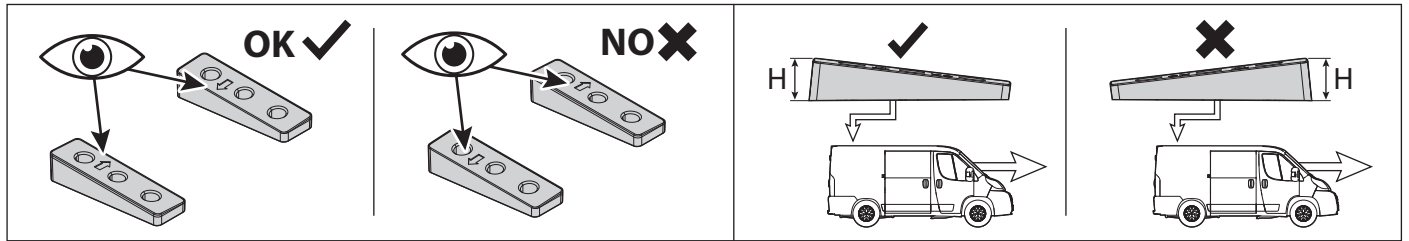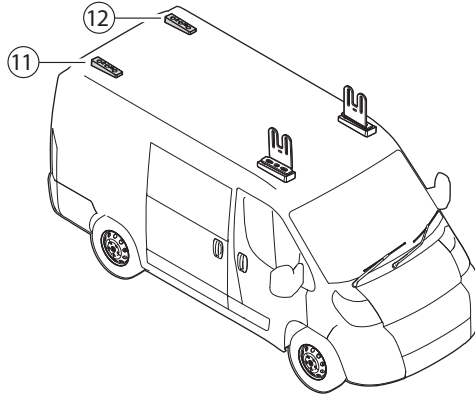
N.		Q.
11	 A3 DX	1
12	 A3 SX	1





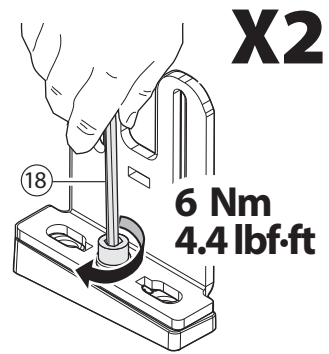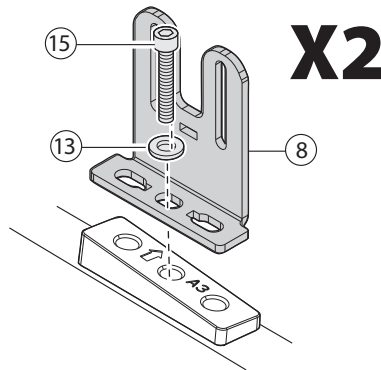


N.		Q.
8		1
13	 Ø8X17	1
15	 M8X30	1





3 **B** REAR

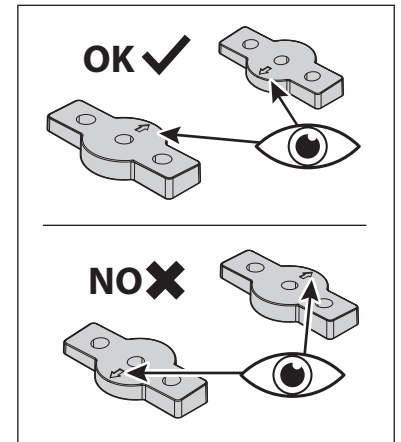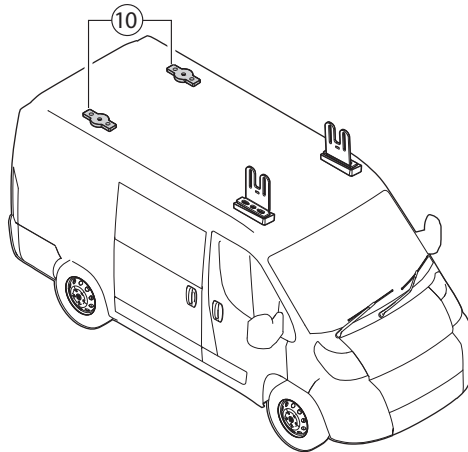N.		Q.
10	 A2	2




N.		Q.
8		1
13	 Ø8X17	1
15	 M8X30	1

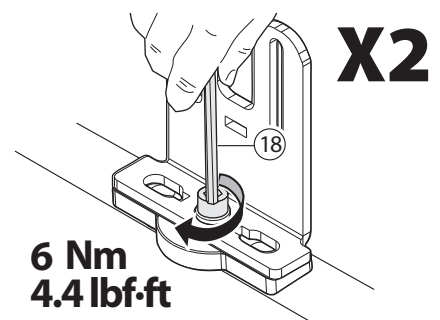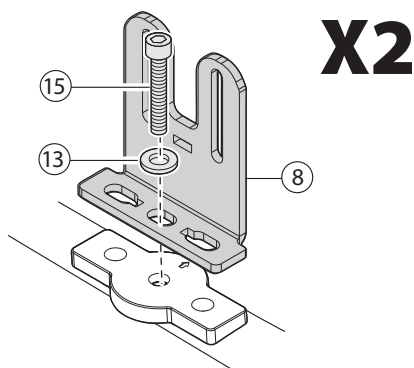

4

X2


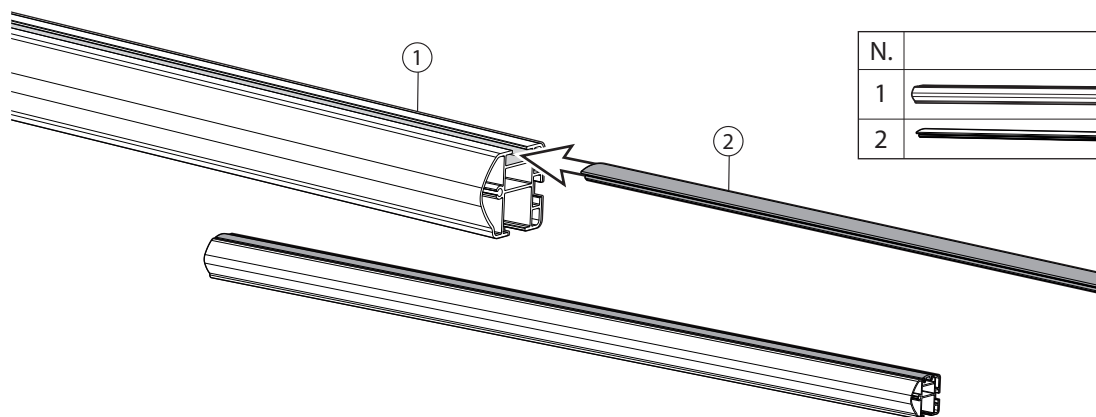


N.		Q.
1		1
2		1

5

X2

N.		Q.
6		2

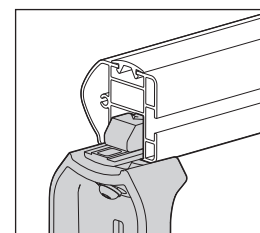
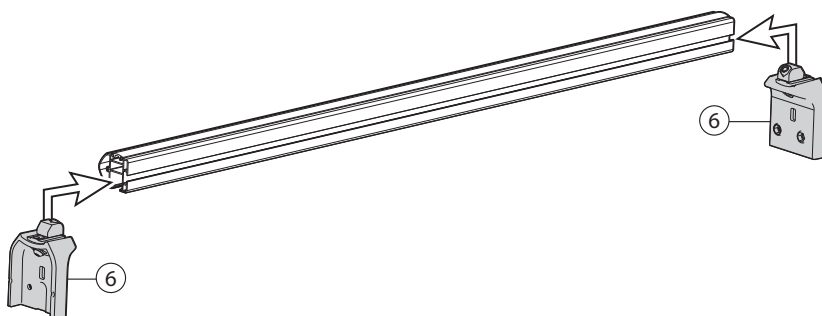


6

B D



x4

N.		Q.
16	M6x16	2
14	ø6x18	2
17	M6	2

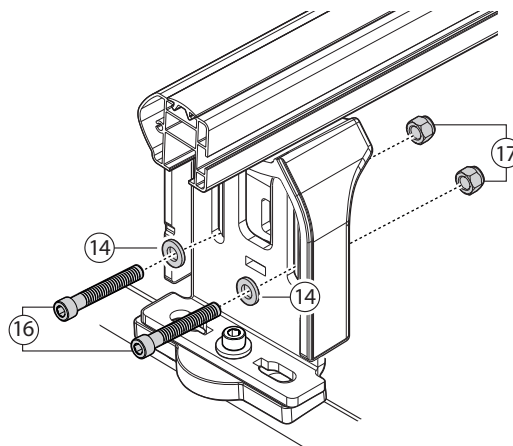
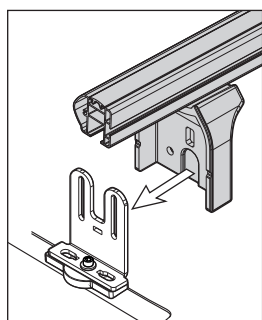


7



X4

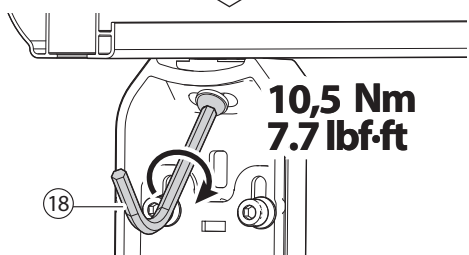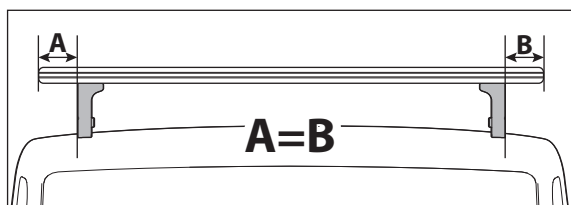


N.		Q.
4a		1
4b		1
5		1

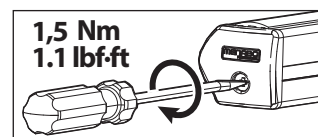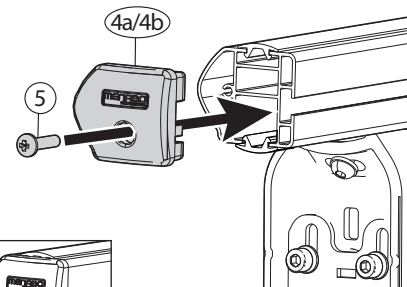


8

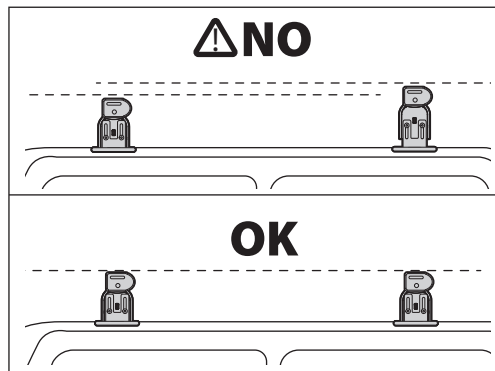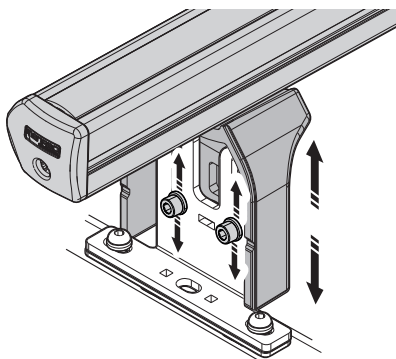

9

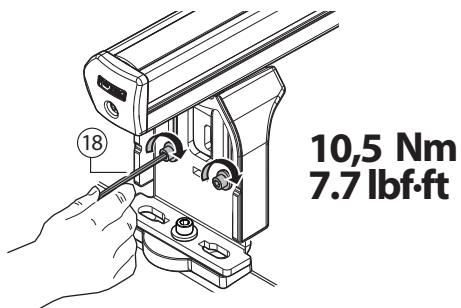




N.	Q.
9	1

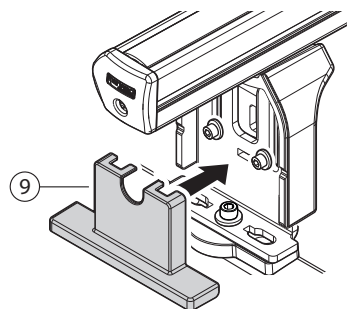

x4

10





N.	Q.
7	1
19	1

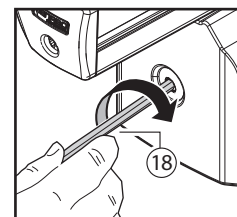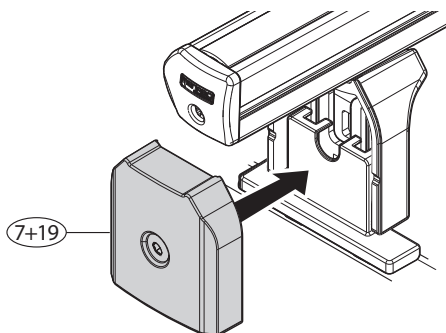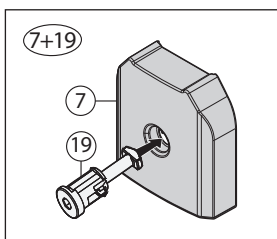

x4

11 — **OPTIONAL KIT Art.00008480000**


x4












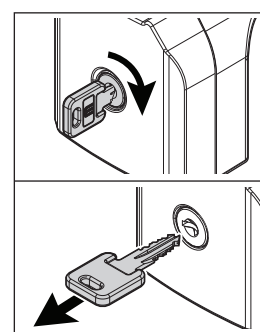
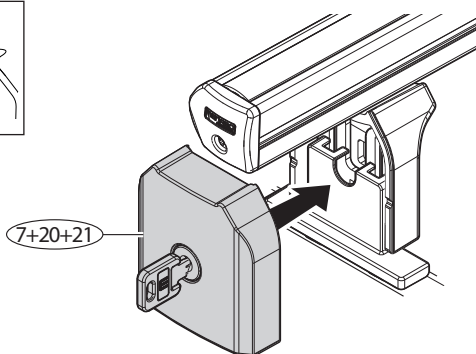
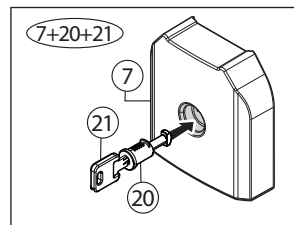
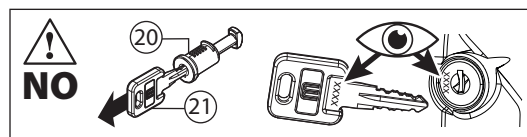


12

x2

N.	Q.
3	1

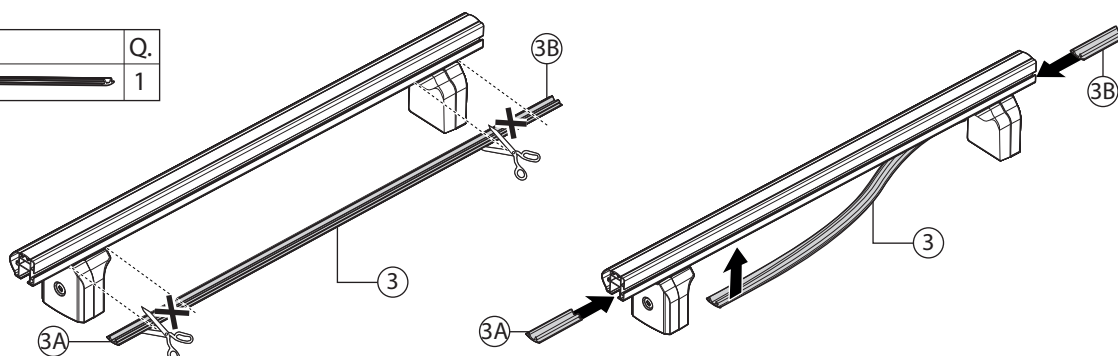

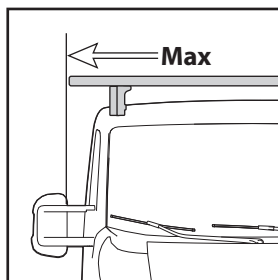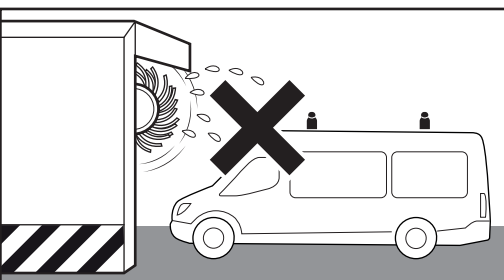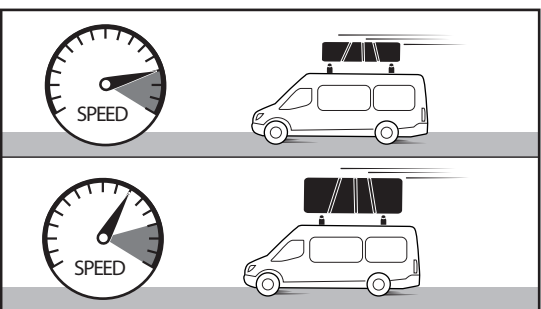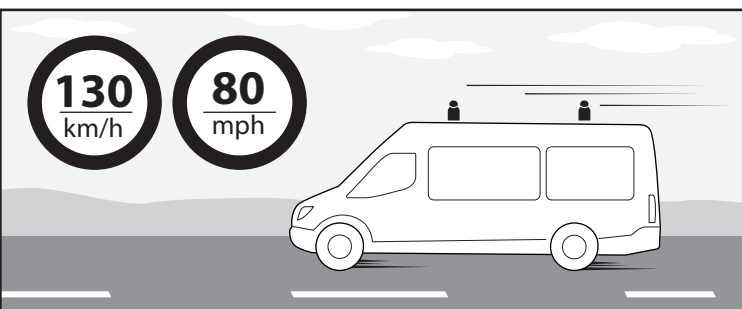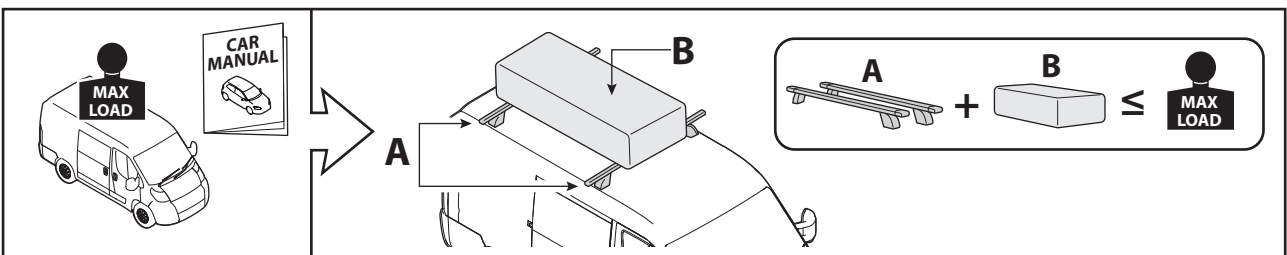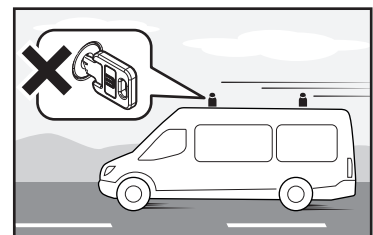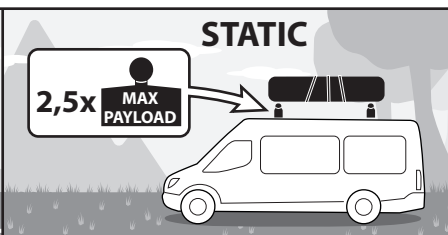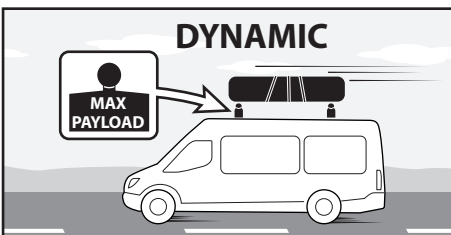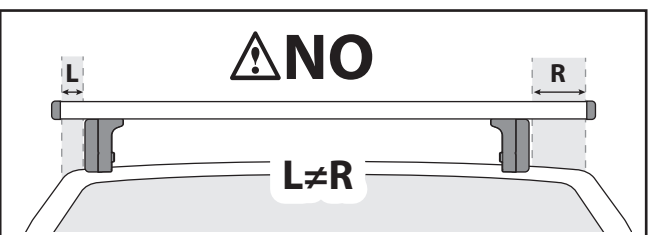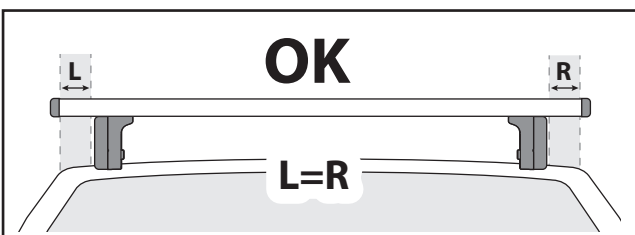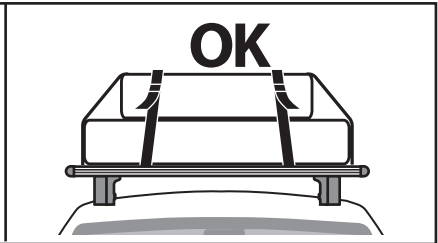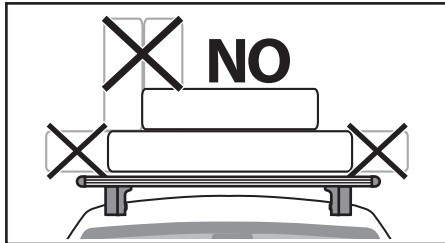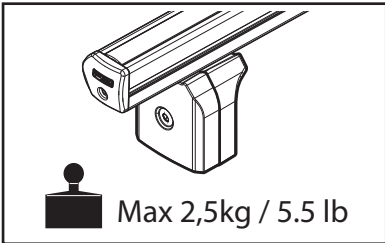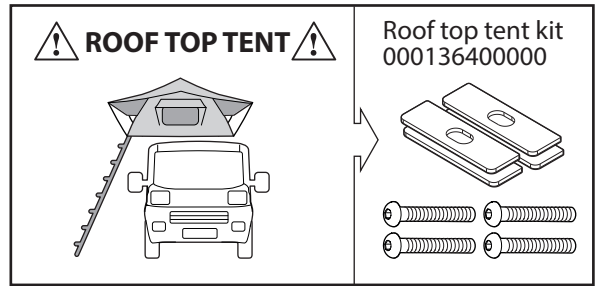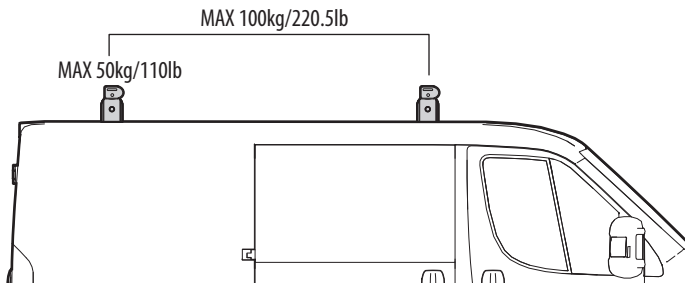

F.lli Menabò S.r.l.
Via 8 Marzo, 3 -Z.I. Corte Tegge
42025 Cavriago (RE) ITALY
customercare@flli-menabo.it
www.menabocaraccessories.com



500043200000
03/02/2023